
5.Installation

VIDEO DOOR PHONE FOR VILLA

USER MANUAL

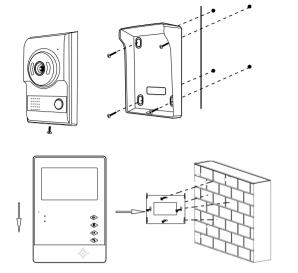


145cm-160cm

Indoor unit Standard installation height is 145cm~160cm (distance between screen centre and the floor)

Outdoor unit Standard installation height is 145cm~160cm

(distance between camera and the floor)

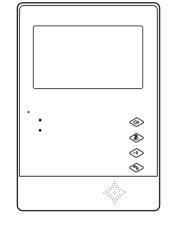



6.Parameters


Indoor unit		Outdoor unit	
Power Supply	Input:AC100-240V Output:DC12v-15v 1500mA	Power Supply	Receive power from monitor
Power	Standby:≤1W Working:≤10W	Power	Standby:≤0W Working:≤2W
Screen	TFT Liquid Crystal Display	Camera	30W
Wiring	4 OR 5 PIN Line RVV	Night Version	WLED,Super backlight compensation
Timing	Intercom:90 seconds Monitoring:90 seconds	Working Temperature	-30 °C - +60 °C
Ringtone	25 chord		
Working Temperature	-20 °C - +60 °C		










 




Please read all of these instruction before installation

1.Indoor unit

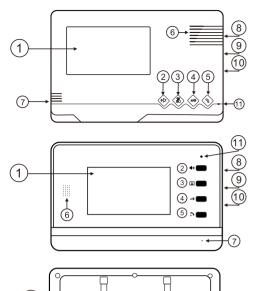

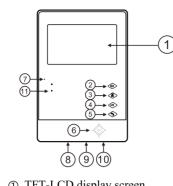



 TFT-LCD display screen
Ring tone & Ring volume adjustment
Monitor button
Unlock button
Intercom or call button
Speaker
Microphone
Screen color adjustment
Screen brightness adjustment
Intercom volume adjustment
Power LED
Sockets for outdoor unit connection (The same function for two sockets)
DC15V Adaptor sockets


2.Outdoor unit


12

   13

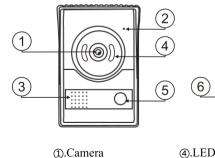







 $\overline{(7)}$

4

(3)

3.Operating Instructions

(2).MIC

3.Speaker

a.Settings

Three settings can be adjusted by the turbine(on the right side) 1.Brightness of screen

2.Color of screen

3. Volume of communication

b.Indoor station volume&music setting

1.Music settings

Press the "Monitor button" enter into working state, then press "Ring tone & Ring volume adjustment button", you will hear the ring at the same time ,you can adjust the ring tone,36 ring tone can be chosen, after all ,closed the monitor button, finished the music settings.

2.Ring volume settings

Press the "Monitor button" enter into working state, then press "Ring tone & Ring volume adjustment button", you will hear the ring ,and then keep pressing this button hold 2 seconds, the ring volume will change to higher or lower. There have three levels to choose, you can choose the best.

3.Ring cancel settings

(2)

(5

 $\overline{\mathbf{O}}$

G,

......

4 wire indoor monitor: Press the "Monitor button" enter into working state, then press "Ring cancel button"hold 5 seconds, the ring tone will be"OPEN" or "CLOSE".

5 wire indoor monitor: Press the "Monitor button" enter into working state, then press "Ring cancel button" less 1 second, the ring tone will be "OPEN" or "CLOSE".

This function won't affect the image from the screen.

Note: you can press the "Ring tone & Ring volume adjustment button" to test whether you had succeed to setting this function.

4.Connection of the video doorphone

